



SCREENFILM™

INSTALLATION INSTRUCTIONS

ESTIMATED INSTALL TIME - 2 MINUTES

axiom armor™ 

STEP 1

***NOTE - TURN OFF DEVICE DURING
INSTALLATION PROCESS TO PREVENT
SCREEN FROM COMING ON.***

Place your device on a non-slip surface and clean your screen thoroughly to remove any oils, dust, or other debris.



STEP 2

Gently remove the screen protector from the backing paper. You can touch it on any side. It will not matter.



STEP 3

Align **SCREENFILM™ with the tacky side down on your device's screen, making sure any cutouts are also properly aligned.**


*Note - You may gently lift the ScreenFilm™ from the device if you didn't align it properly, and try again. The tacky side is not what will remain on your device, so fingerprints on the tacky side do not matter.



STEP 4

Use the included squeegee with the fabric side down to firmly press the **SCREENFILM™** onto your device's screen.

*Note - Removing air bubbles is not important at this step. You are only doing this so that the tacky part of the ScreenFilm™ grabs any last minute dust particles from your device's screen.

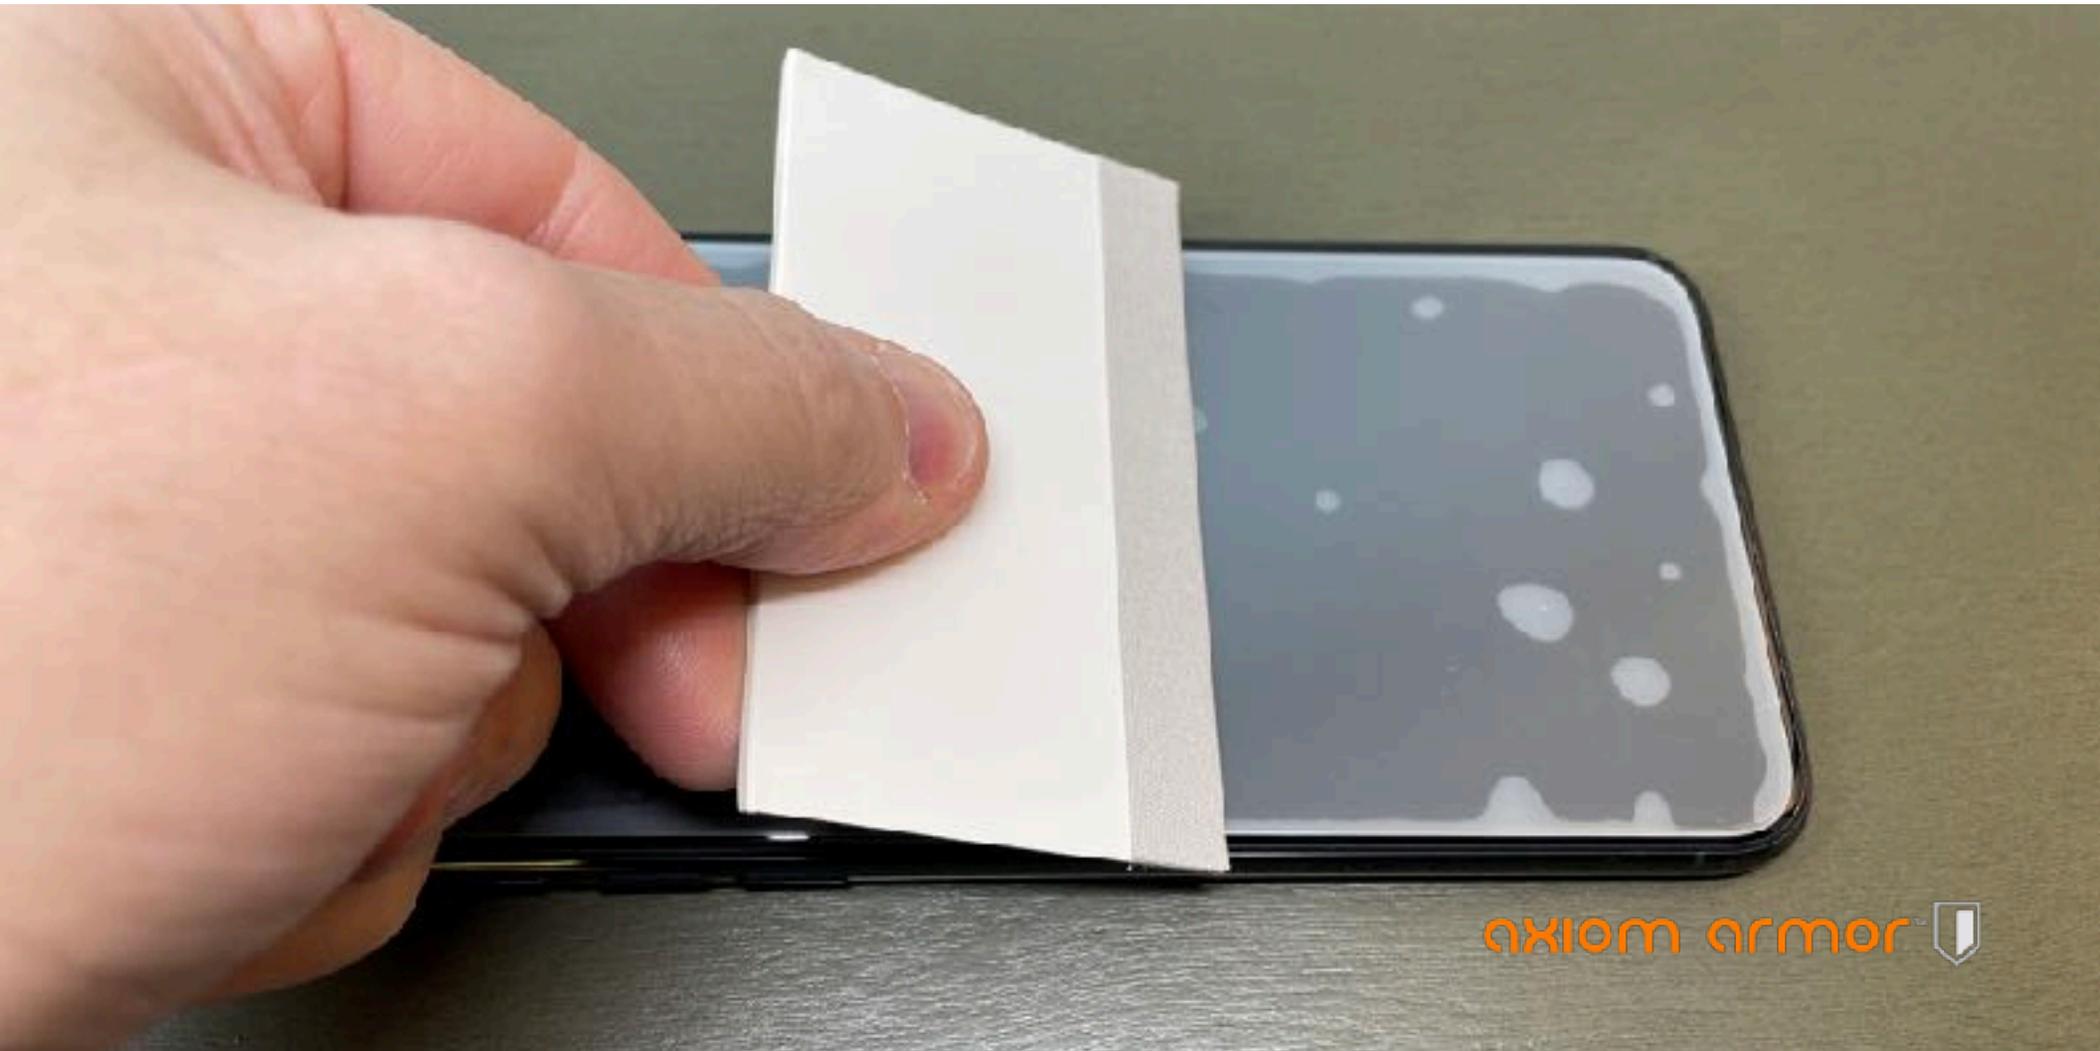

STEP 5

Lift one side of the **SCREENFILM™** up as shown.



STEP 6

Use the included squeegee with the fabric side down to firmly and evenly slide across the exposed half of your device's screen.

*This process will eject the tacky alignment layer and apply the ScreenFilm™ onto your device's screen.



STEP 7

Flip the device to prepare to perform the same process to the other half.


Pull back slightly beyond the already applied **SCREENFILM™** and proceed with firmly sliding the squeegee down the other half of the screen.



STEP 8

Use your finger to work from the inside out along all edges of your device to firmly press the **SCREENFILM™** onto your screens edges. Firmly slide the included squeegee across any areas like the ones indicated below, working from the inside out, to help eliminate any air underneath.


*Don't worry if you do not get it perfect, but try to get it close. Air will permeate out over the next several hours.

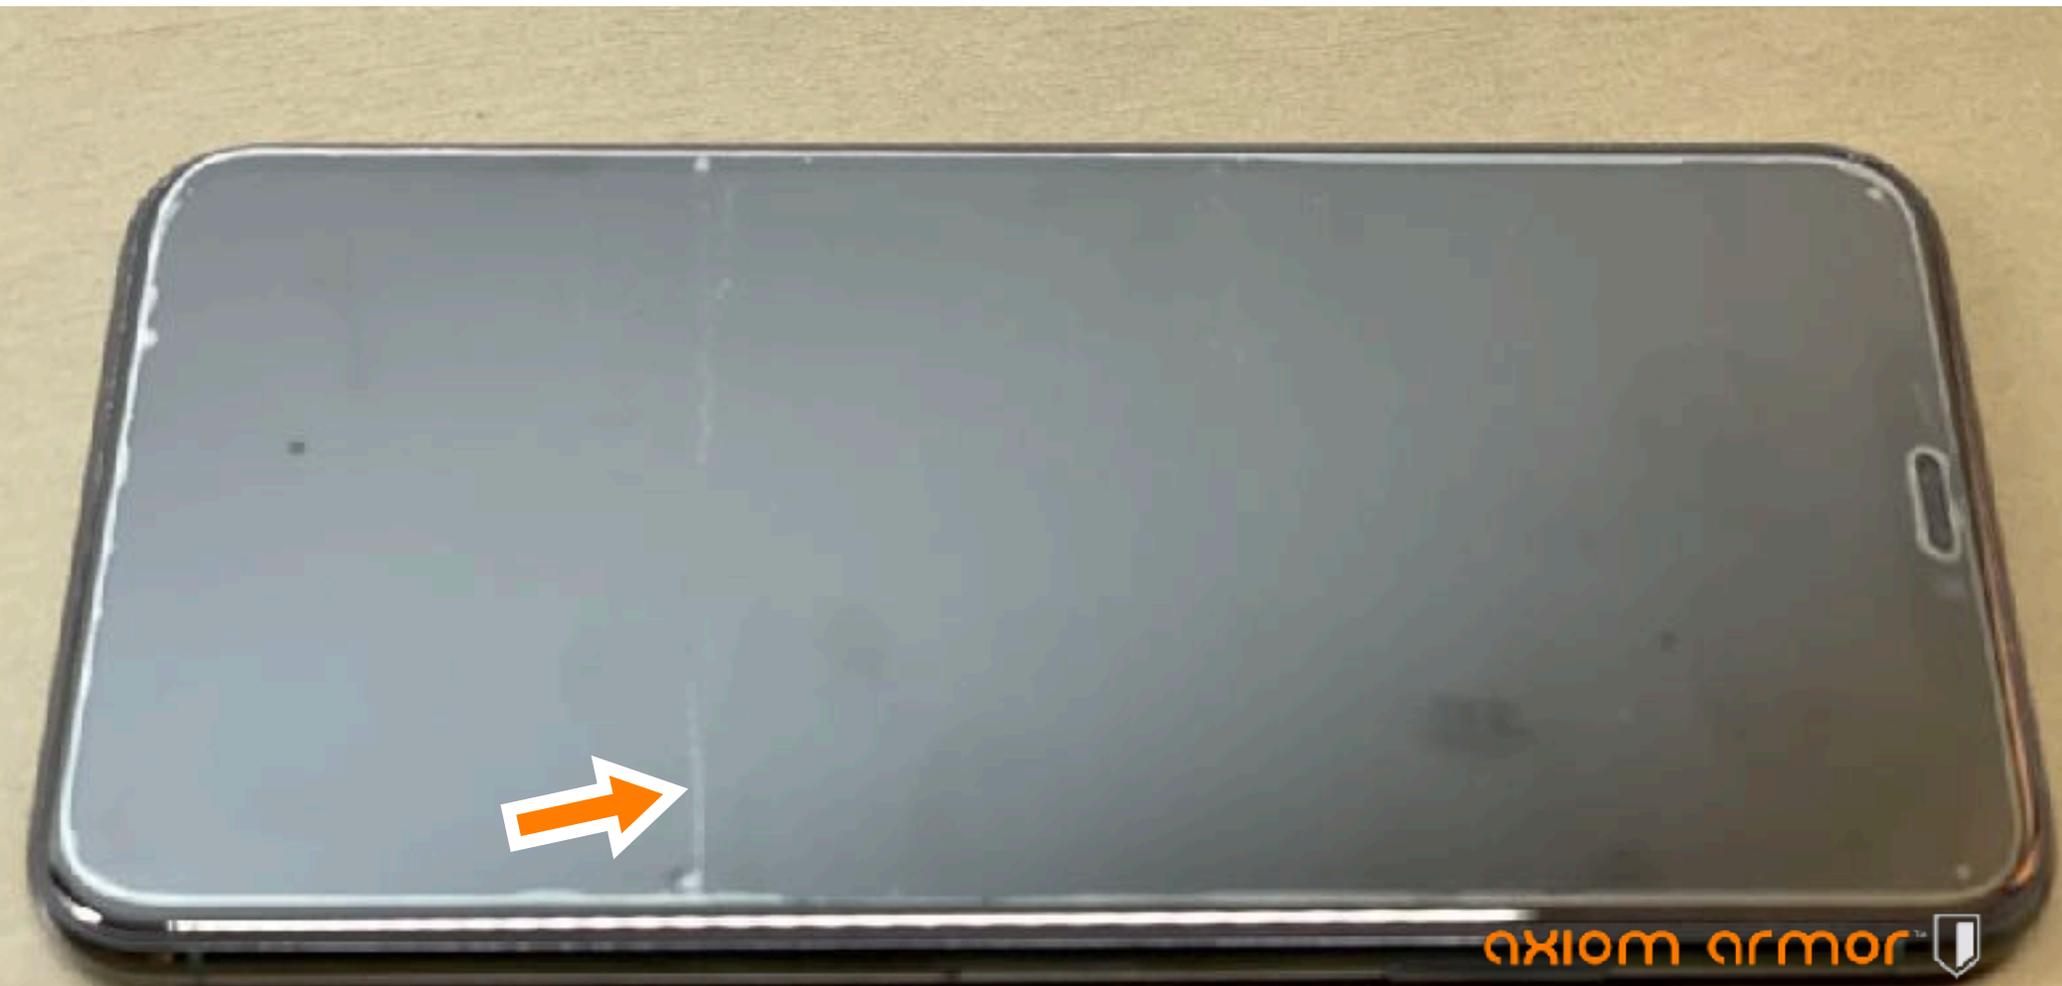

STEP 9

Finally, lightly pick at a corner with your fingernail and remove the top protective layer.

*Try not to go too deep as to grab the actual ScreenFilm™ that will remain on your device

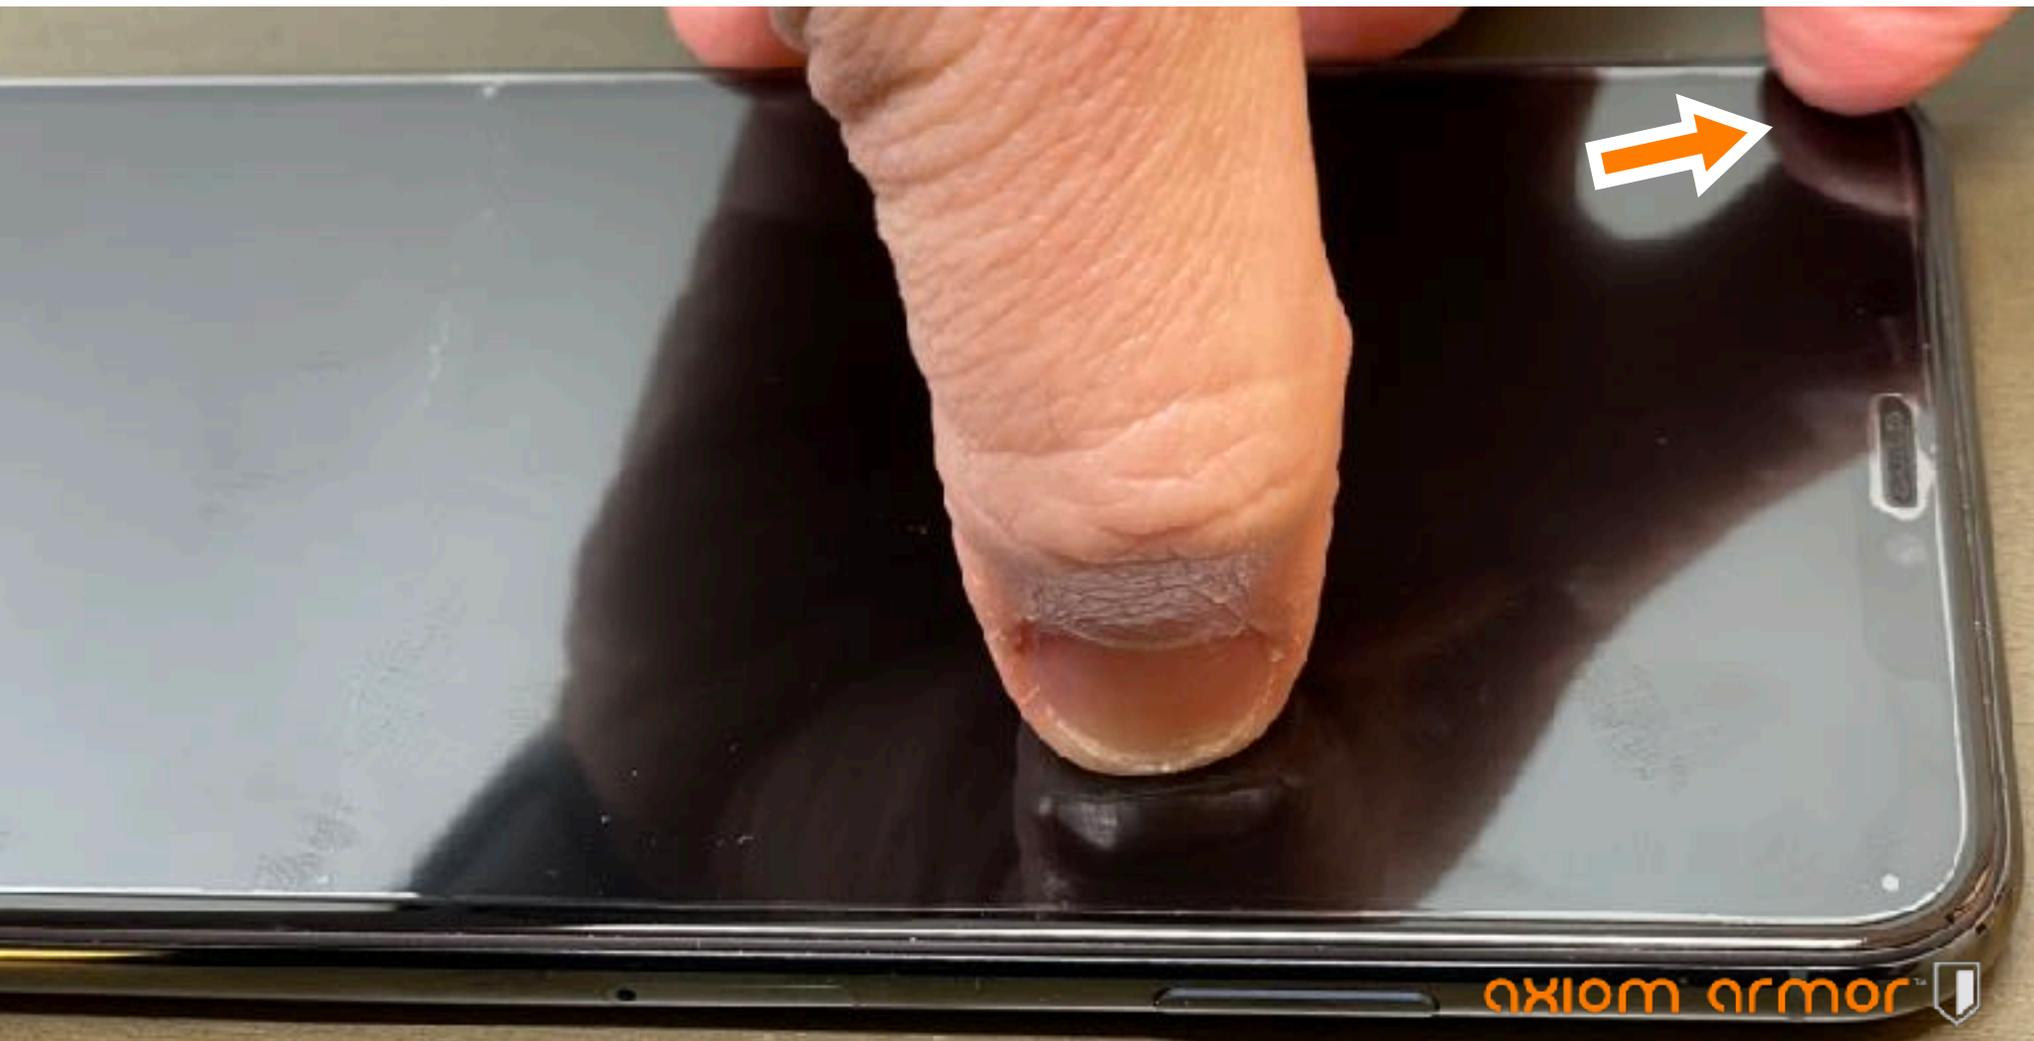



If you need further assistance installing
SCREENFILM™ please let us know.

PHONE: 540-215-8444

EMAIL: info@axiomarmor.com

axiom armor™ 